



Grapples

SGC1060 & SGC1072


35663

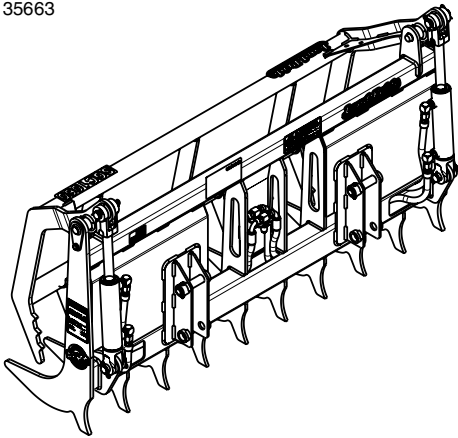

**Claw Grapple With
Kubota B Hitch Plate**

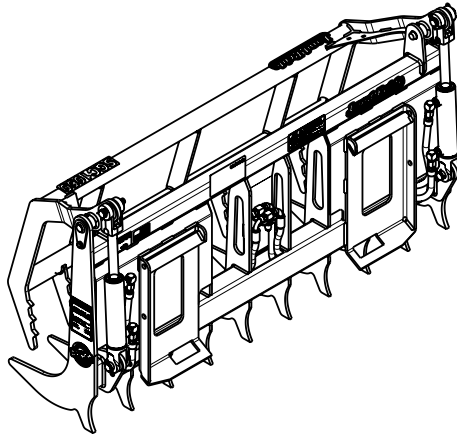

**Claw Grapple With
Skid/Loader Hitch Plate**

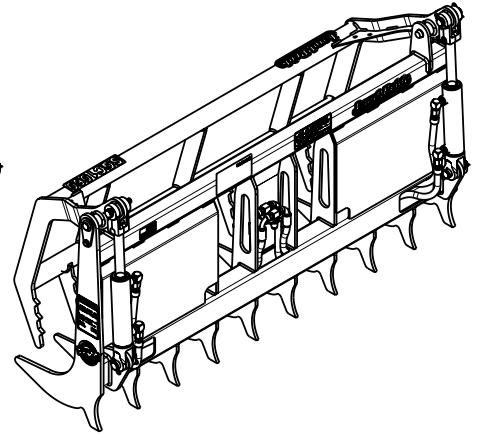

**Claw Grapple With
No Hitch Plate**

380-092M Operator's Manual



Read the Operator's Manual entirely. When you see this symbol, the subsequent instructions and warnings are serious - follow without exception. Your life and the lives of others depend on it!

Cover photo may show optional equipment not supplied with standard unit.

For an Operator's Manual and Decal Kit in French Language, please see your Land Pride dealer.



Machine Identification

Record your machine details in the log below. If you replace this manual, be sure to transfer this information to the new manual.

If you, or the dealer, have added Options not originally ordered with the machine, or removed Options that were originally ordered, the weights and measurements are no longer accurate for your machine. Update the record by adding the machine weight and measurements provided in the Specifications & Capacities Section of this manual with the Option(s) weight and measurements.

Model Number	
Serial Number	
Machine Height	
Machine Length	
Machine Width	
Machine Weight	
Delivery Date	
First Operation	
Accessories	<hr/> <hr/> <hr/>

Dealer Contact Information


Name: _____

Street: _____

City/State: _____

Telephone: _____

Email: _____

 California Proposition 65 WARNING: Cancer and reproductive harm - www.P65Warnings.ca.gov



Important Safety Information	1	Section 3: Maintenance & Lubrication	17
Safety at All Times	1	Maintenance	17
Look for the Safety Alert Symbol	1	Hydraulic System	17
Safety Labels	6	Long-Term Storage	17
Introduction	7	Lubrication Points	18
Application	7	Upper Grapple Pivot Points	18
Using This Manual	7	Section 4: Specifications & Capacities	19
Terminology	7	Section 5: Features & Benefits	20
Definitions	7	Section 6: Troubleshooting	21
Owner Assistance	7	Section 7: Torque Values Chart	22
Serial Number	7	Section 8: Warranty	23
Further Assistance	7		
Section 1: Assembly & Set-Up	8		
Tractor Requirements	8		
Torque Requirements	8		
Before You Start	8		
Grapple Mount Options	8		
Installation of Hydraulic Hoses	9		
Tractor Shutdown Procedure	9		
Hook-up to Universal Quick Hitch	10		
Unhook From Universal Quick Hitch	10		
Hook-up to Kubota B Series Hitch	11		
Unhook From Kubota B Series Hitch	11		
Hydraulic Hose Hook-Up	12		
Equipment Clearances	12		
Purging Hydraulic System	12		
Section 2: Operating Procedures	13		
Operating Checklist	13		
General Inspection	13		
Operating Safety	13		
Transport Safety	15		
Claw Grapple Operation	15		
Picking-Up A Load	15		
Traveling With A Load	15		
Releasing A Load	16		
Ripping Out Bushes	16		
Breaking Sod & Pulling Roots	16		
Back Raking	16		
General Operating Instructions	16		



© Copyright 2022 All rights Reserved

Land Pride provides this publication “as is” without warranty of any kind, either expressed or implied. While every precaution has been taken in the preparation of this manual, Land Pride assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein. Land Pride reserves the right to revise and improve its products as it sees fit. This publication describes the state of this product at the time of its publication, and may not reflect the product in the future.

Land Pride is a registered trademark.

All other brands and product names are trademarks or registered trademarks of their respective holders.

Printed in the United States of America.



Table of Contents Continued

See previous page for Table of Contents.



Parts Manual QR Locator

The QR (Quick Reference) code on the left will take you to the Parts Manual for this equipment. Download the appropriate App on your smart phone, open the App, point your phone on the QR code and take a picture.



Dealer QR Locator

The QR code on the left will link you to available dealers for Land Pride products. Refer to Parts Manual QR Locator on this page for detailed instructions.

Listed below are common practices that may or may not be applicable to the products described in this manual.

Safety at All Times

Careful operation is your best assurance against an accident.

All operators, no matter how much experience they may have, should carefully read this manual and other related manuals, or have the manuals read to them, before operating the power machine and this attachment.

- ▲ Thoroughly read and understand the "Safety Label" section. Read all instructions noted on them.
- ▲ Do not operate the equipment while under the influence of drugs or alcohol as they impair the ability to safely and properly operate the equipment.
- ▲ The operator should be familiar with all functions of the tractor and attachment and be able to handle emergencies quickly.
- ▲ Make sure all guards and shields appropriate for the operation are in place and secured before operating the attachment.
- ▲ Keep all bystanders away from equipment and work area.
- ▲ Start tractor from the driver's seat with hydraulic controls in neutral.
- ▲ Operate tractor and controls from the driver's seat only.
- ▲ Never dismount from a moving tractor or leave tractor unattended with engine running.
- ▲ Do not allow anyone to stand between tractor and attachment while hooking-up.
- ▲ Keep hands, feet, and clothing away from power-driven parts.
- ▲ While transporting and operating equipment, watch out for objects overhead and along side such as fences, trees, buildings, wires, etc.
- ▲ Store attachment in a safe and secure area where children normally do not play. When needed, secure attachment against falling with support blocks.



Look for the Safety Alert Symbol

The SAFETY ALERT SYMBOL indicates there is a potential hazard to personal safety and extra precaution must be taken. When you see this symbol, be alert and carefully read the message that follows it. Hazard control, and accident prevention are dependent upon the awareness, concern, prudence, and proper training of personnel involved in the operation, transport, maintenance, and storage of equipment.

Be Aware of Signal Words

A signal word designates a degree or level of hazard seriousness. They are:

- ▲ **DANGER:** Indicates a hazardous situation that, if not avoided, will result in death or serious injury.
- ▲ **WARNING:** Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
- ▲ **CAUTION:** Indicates a hazardous situation that, if not avoided, may result in minor or moderate injury.

Be Aware of Special Notices

Special notices are intended to point out important and helpful information that should be followed. They are usually placed inside a box. They are:

- ▲ **IMPORTANT:** Indicates that equipment or property damage could result if instructions are not followed.
- ▲ **NOTE:** Indicates supplementary explanations that will be helpful when using the equipment.


Safety Precautions for Children

Tragedy can occur if the operator is not alert to the presence of children. Children generally are attracted to attachments and their work.

- ▲ Never assume children will remain where you last saw them.
- ▲ Keep children out of the work area and under the watchful eye of a responsible adult.
- ▲ Be alert and shut the attachment and tractor down if children enter the work area.
- ▲ Never carry children on the tractor or attachment. There is not a safe place for them to ride. They may fall off and be run over or interfere with the control of the power machine.
- ▲ Never allow children to operate the power machine, even under adult supervision.
- ▲ Never allow children to play on the power machine or attachment.
- ▲ Use extra caution when backing up. Before the tractor starts to move, look down and behind to make sure the area is clear.

Tractor Shutdown & Storage

- ▲ If engaged, disengage power take-off.
- ▲ Park on solid, level ground and lower attachment until it is flat on the ground or on non-concrete support blocks.
- ▲ Put tractor in park or set park brake.
- ▲ Turn off engine and remove ignition key to prevent unauthorized starting.
- ▲ Relieve all hydraulic pressure to auxiliary hydraulic lines.
- ▲ Wait for all components to stop before leaving operator's seat.
- ▲ Use steps, grab-handles and anti-slip surfaces when stepping on and off the tractor.

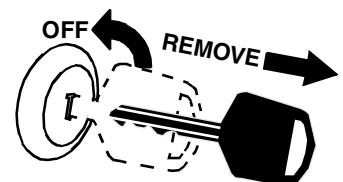

Listed below are common practices that may or may not be applicable to the products described in this manual.

Dig Safe - Avoid Underground Utilities

- ▲ **USA: Call 811**
CAN: digsafecanada.ca
Always contact your local utility companies (electrical, telephone, gas, water, sewer, and others) before digging so that they may mark the location of any underground services in the area.
- ▲ Be sure to ask how close you can work to the marks they positioned.



Transport Safely

- ▲ Comply with federal, state, and local laws.
- ▲ Use towing vehicle and trailer of adequate size and capacity. Secure equipment towed on a trailer with tie downs and chains.
- ▲ Sudden braking can cause a towed trailer to swerve unexpectedly. Reduce speed if towed trailer is not equipped with brakes.
- ▲ Avoid contact with any overhead utility lines or electrically charged conductors.
- ▲ Always drive with load on end of loader arms low to the ground.
- ▲ Always drive straight up and down steep inclines with heavy end of skid steer on the "uphill" side.
- ▲ Engage park brake when stopped on an incline.
- ▲ Maximum transport speed for an attached equipment is 20 mph (32 km/h). **DO NOT EXCEED.** Never travel at a speed which does not allow adequate control of steering and stopping. Some rough terrains require a slower speed.
- ▲ As a guideline, use the following maximum speed weight ratios for attached equipment:
 - 20 mph (32 km/h)** when weight of attached equipment is less than or equal to the weight of machine towing the equipment.
 - 10 mph (16 km/h)** when weight of attached equipment exceeds weight of machine towing equipment but not more than double the weight.
- ▲ **IMPORTANT:** Do not tow a load that is more than double the weight of the vehicle towing the load.



Tire Safety

- ▲ Tire changing can be dangerous and must be performed by trained personnel using the correct tools and equipment.
- ▲ Always properly match the wheel size to the properly sized tire.
- ▲ Always maintain correct tire pressure. Do not inflate tires above recommended pressures shown in the Operator's Manual.
- ▲ When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.
- ▲ Securely support the attachment when changing a wheel.
- ▲ When removing and installing wheels, use wheel handling equipment adequate for the weight involved.
- ▲ Make sure wheel bolts have been tightened to the specified torque.



Practice Safe Maintenance


- ▲ Understand procedure before doing work. Refer to the Operator's Manual for additional information.
- ▲ Work on a level surface in a clean dry area that is well-lit.
- ▲ Lower attachment to the ground and follow all shutdown procedures before leaving the operator's seat to perform maintenance.
- ▲ Do not work under any hydraulically supported equipment. It can settle, suddenly leak down, or be lowered accidentally. If it is necessary to work under the equipment, securely support it with stands or suitable blocking beforehand.
- ▲ Use properly grounded electrical outlets and tools.
- ▲ Use correct tools and equipment for the job that are in good condition.
- ▲ Allow equipment to cool before working on it.
- ▲ Disconnect battery ground cable (-) before servicing or adjusting electrical systems or before welding on equipment.
- ▲ Inspect all parts. Make certain that parts are in good condition & installed properly.
- ▲ Replace parts on this attachment with genuine Land Pride parts only. Do not alter this attachment in a way which will adversely affect its performance.
- ▲ Do not grease or oil attachment while it is in operation.
- ▲ Remove buildup of grease, oil, or debris.
- ▲ Always make sure any material and waste products from the repair and maintenance of the attachment are properly collected and disposed.
- ▲ Remove all tools and unused parts before operation.



Listed below are common practices that may or may not be applicable to the products described in this manual.

Prepare for Emergencies

- ▲ Be prepared if a fire starts.
- ▲ Keep a first aid kit and fire extinguisher handy.
- ▲ Keep emergency numbers for doctor, ambulance, hospital, and fire department near the phone.

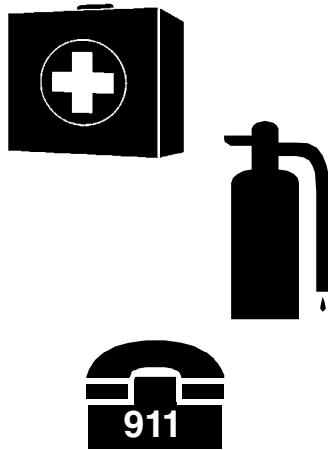

Wear Personal Protective Equipment (PPE)

- ▲ Wear protective clothing and equipment appropriate for the job such as safety shoes, safety glasses, hard hat, dust mask, and ear plugs.
- ▲ Clothing should fit snug without fringes and pull strings to avoid entanglement with moving parts.
- ▲ Prolonged exposure to loud noise can cause hearing impairment or hearing loss. Wear suitable hearing protection such as earmuffs or earplugs.
- ▲ Operating a machine safely requires the operator's full attention. Avoid wearing headphones while operating equipment.




Avoid High Pressure Fluids

- ▲ Escaping fluid under pressure will penetrate the skin or eyes causing serious injury.
- ▲ Relieve all residual pressure before disconnecting hydraulic lines or performing work on the hydraulic system.
- ▲ Make sure all hydraulic fluid connections are properly tightened/torqued and all hydraulic hoses and lines are in good condition before applying pressure to the system.
- ▲ Use a piece of wood or cardboard, NOT BODY PARTS, to check for suspected leaks.
- ▲ Wear protective gloves and safety glasses or goggles when working with hydraulic systems.
- ▲ **DO NOT DELAY.** If an accident occurs, seek immediate emergency medical care or gangrene may result.




Use Safety Lights and Devices

- ▲ A slow moving power machine can create a hazard when driven on public roads. They are difficult to see, especially at night. Use the Slow Moving Vehicle (SMV) sign when on public roads.
- ▲ Flashing warning lights and turn signals are recommended whenever driving on public roads.

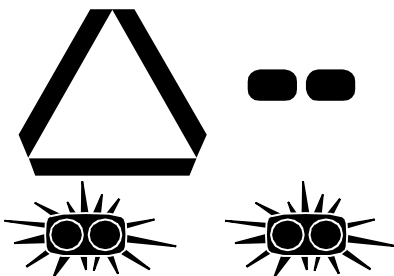


Use Seat Belt and ROPS

- ▲ Land Pride recommends the use of a CAB or roll-over-protective-structures (ROPS) and seat belt in almost all power machines. Combination of a CAB or ROPS and seat belt will reduce the risk of serious injury or death if the power machine should be upset.
- ▲ If ROPS is in the locked-up position, fasten seat belt snugly and securely to help protect against serious injury or death from falling and machine overturn.

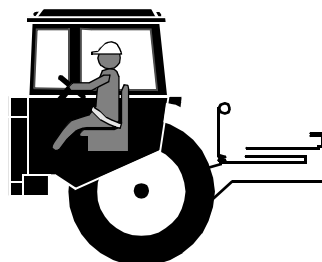

Keep Riders Off Machinery

- ▲ Never carry riders on tractor or attachment.
- ▲ Riders obstruct operator's view and interfere with the control of the power machine.
- ▲ Riders can be struck by objects or thrown from the equipment.
- ▲ Never use the tractor or attachment to lift or transport riders.

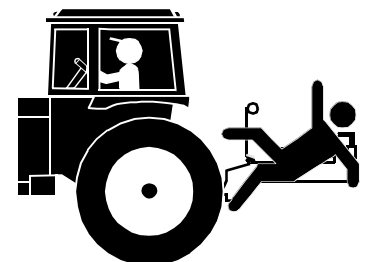


These are common practices that may or may not be applicable to the products described in this manual.

Avoid crystalline Silica (quartz) Dust

Because crystalline silica is a basic component of sand and granite, many activities at construction sites produce dust containing crystalline silica. Trenching, sawing, and boring of material containing crystalline silica can produce dust containing crystalline silica particles. This dust can cause serious injury to the lungs (silicosis).

There are guidelines which should be followed if crystalline silica (quartz) is present in the dust.

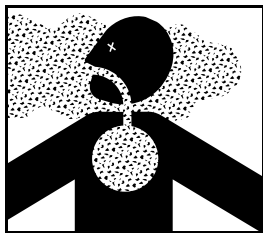

- ▲ Be aware of and follow OSHA (or other local, State, or Federal) guidelines for exposure to airborne crystalline silica.
- ▲ Know the work operations where exposure to crystalline silica may occur.
- ▲ Participate in air monitoring or training programs offered by the employer.
- ▲ Be aware of and use optional equipment controls such as water sprays, local exhaust ventilation, and enclosed cabs with positive pressure air conditioning if the machine has such equipment. Otherwise respirators shall be worn.
- ▲ Where respirators are required, wear a respirator approved for protection against crystalline silica containing dust. Do not alter respirator in any way. Workers who use tight-fitting respirators can not have beards/mustaches which interfere with the respirator seal to the face.
- ▲ If possible, change into disposable or washable work clothes at the work site; shower and change into clean clothing before leaving the work site.
- ▲ Do not eat, drink, use tobacco products, or apply cosmetics in areas where there is dust containing crystalline silica.
- ▲ Store food, drink, and personal belongings away from the work area.
- ▲ Wash hands and face before eating, drinking, smoking, or applying cosmetics after leaving the exposure area.

Handle Chemicals Properly

- ▲ Protective clothing should be worn.
- ▲ Handle all chemicals with care.
- ▲ Follow instructions on container label.
- ▲ Agricultural chemicals can be dangerous. Improper use can seriously injure persons, animals, plants, soil, and property.
- ▲ Inhaling smoke from any type of chemical fire can be a serious health hazard.
- ▲ Store or dispose of unused chemicals as specified by the chemical manufacturer.





This page left blank intentionally.



Important Safety Information


Safety Labels

Your Claw Grapple comes equipped with all safety labels in place. They are designed to help you safely operate your attachment. Read and follow their directions.

1. Keep all safety labels clean and legible.
2. Refer to this section for proper label placement. Replace all damaged or missing labels. Order new labels from your nearest Land Pride dealer. To find your nearest dealer, visit our dealer locator at www.landpride.com.
3. Some new equipment installed during repair requires safety labels to be affixed to the replaced component as

specified by Land Pride. When ordering new components make sure the correct safety labels are included in the request.

4. Refer to this section for proper label placement. To install new labels:
 - a. Clean surface area where label is to be placed.
 - b. Spray soapy water onto the cleaned area.
 - c. Peel backing from label and press label firmly onto the surface.
 - d. Squeeze out air bubbles with edge of a credit card or with a similar type of straight edge.


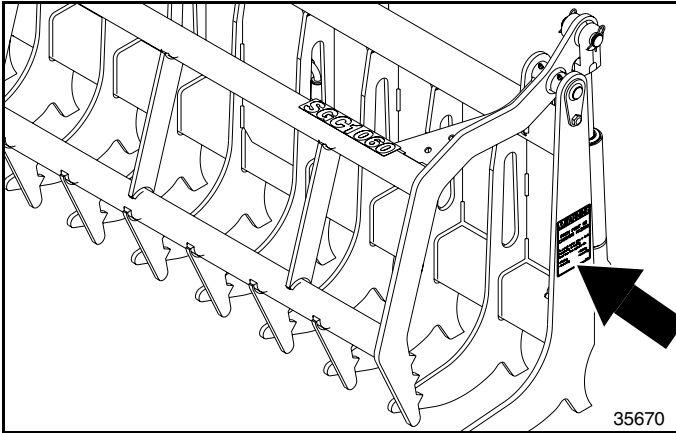


70368

838-378C

Warning: Pinch Point or Crushing Hazard

2 Places: One on each side.

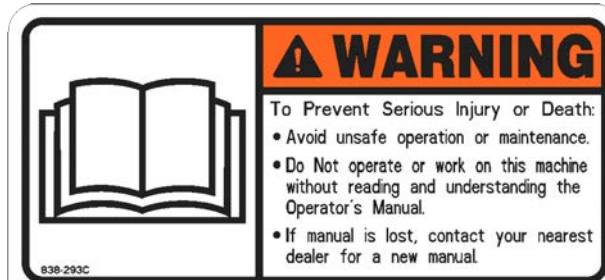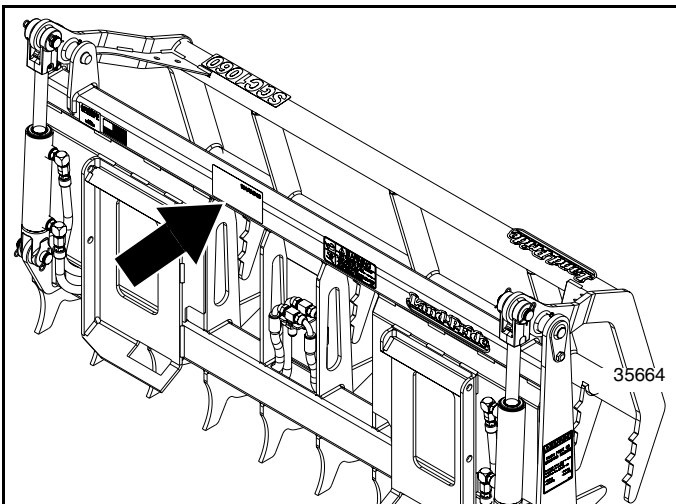


70243

838-293C

Warning: Read Operator's Manual

1 Place

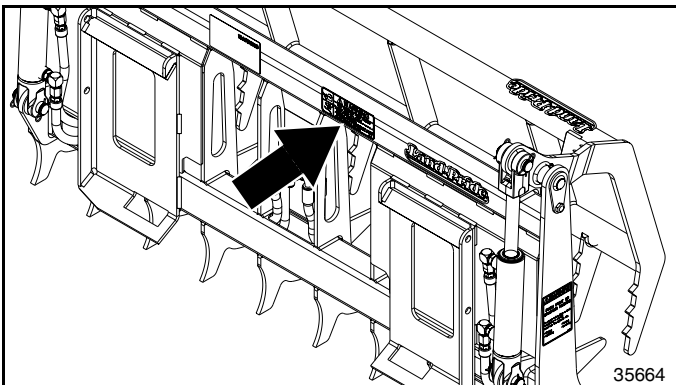

70245

838-094C

Warning: High Pressure Fluid Hazard

1 Place

Introduction

Land Pride welcomes you to the growing family of new product owners. This Claw Grapple has been designed with care and built by skilled workers using quality materials. Proper assembly, maintenance, and safe operating practices will help you get years of satisfactory use from this attachment.

Application

The Land Pride SGC1060 and SGC1072 Claw Grapples have uses and applications in farming, ranching, construction sites, nurseries, campuses, theme parks, salvage operations, warehouses, lumber yards, and large or small retail outlets. They are suited for tractors in the 30-55 hp (22-41 kW) range and have the capability of quickly and conveniently turning your tractor's front mounted loader into a grapple, expanding your material handling capability. See "**Grapple Mount Options**" on page 8 for a description of different front loader hitch styles this grapple will meet.

The Claw Grapples are available in 60" (152 cm) and 72" (183 cm) widths. Whichever width you select, you'll find these Land Pride attachments will save you time and money and make getting that material handling job done a whole lot easier.

For additional information, see "**Specifications & Capacities**" on page 19 and "**Features & Benefits**" on page 20.

Using This Manual

- This Operator's Manual is designed to help familiarize the operator with safety, assembly, operation, adjustments, troubleshooting, and maintenance. Read this manual and follow the recommendations to help ensure safe and efficient operation.
- The information contained within this manual was current at the time of printing. Some parts may change slightly to assure you of the best performance.
- To order a new Operator's or Parts Manual, contact your authorized dealer. Manuals can also be downloaded, free-of-charge, from our website at www.landpride.com.

Terminology

"Right" or "Left" as used in this manual is determined by the direction the operator faces while sitting looking forward in the operator's seat unless otherwise stated.

Definitions

IMPORTANT: A special point of information related to the following topic. Land Pride's intention is this information must be read & noted before continuing.

NOTE: A special point of information that the operator should be aware of before continuing.


Owner Assistance

The dealer should complete the Online Warranty Registration at the time of purchase. This information is necessary to provide you with quality customer service.

The parts on your Claw Grapple have been specially designed by Land Pride and should only be replaced with genuine Land Pride parts. Contact a Land Pride dealer if customer service or repair parts are required. Your Land Pride dealer has trained personnel, repair parts, and equipment needed to service the attachment.

Serial Number

For quick reference and prompt service, record model and serial number on the inside cover page and again on the warranty page. Always provide model number and serial number when ordering parts and in all correspondences with your Land Pride dealer. For location of your serial number plate, see Figure 1.

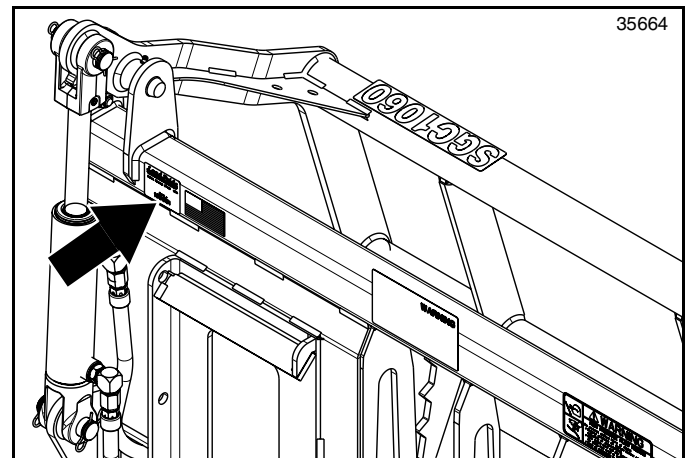

Serial Number Plate Location
Figure 1

Further Assistance

Your dealer wants you to be satisfied with your new Claw Grapple. If for any reason you do not understand any part of this manual or are not satisfied with the service received, the following actions are suggested:

1. Discuss any problems you have with your attachment with your dealership service personnel so they can address the problem.
2. If you are still not satisfied, seek out the owner or general manager of the dealership, explain the question/problem, and request assistance.
3. For further assistance write to:

Land Pride Service Department
1525 East North Street
P.O. Box 5060
Salina, Ks. 67402-5060

E-mail address
lp servicedept@landpride.com



Section 1: Assembly & Set-Up

Tractor Requirements

Tractor horsepower should be within the range noted below. Tractors outside the horsepower range must not be used.

- Horsepower Rating 30-55 hp (22-41 kW)
 - Hitch Options
 - Skid steer type quick attach that meets SAE
 - Kubota B Series Hitch
 - No Mount
 - Hydraulic Outlets One Duplex Outlet
 - Tractor Weight See Important Notes Below
- See “**Australia Rated Operating Loads (ROL)**” on page 19.

IMPORTANT: Do not hitch SGC10 Series grapples to skid steers. The SGC10 Series grapples are not designed to handle forces created by skid steers.

! WARNING

To avoid serious injury or death:

- Consult your power machine Operator’s Manual for operating capacity, lifting capacity, and operating specifications. Exceeding rated capacities and specifications can result in loss of control, roll-over or other serious hazard.
- Lightweight power machines may need weight added to the rear to maintain steering control and prevent forward and/or side tipping. Consult your power machine Operator’s Manual to determine proper weight requirements and maximum limitations.

Torque Requirements

Refer to “**Torque Values Chart**” on page 22 to determine correct torque values when tightening hardware.

Before You Start

Make sure that the intended tractor conforms to the requirements provided on this page. Also, read and understand this Operator’s Manual for your Claw Grapple. An understanding of how it works will aid in its assembly and set-up.

Go through the “**Pre-Assembly Checklist**” on this page before assembling the Claw Grapple. To speed up your assembly task and make the job safer, have all needed parts and equipment readily at hand.

Pre-Assembly Checklist

✓	Check	Ref.
<input type="checkbox"/>	Have a forklift or loader with properly sized chains and safety stands capable of lifting and supporting the equipment on hand.	
<input type="checkbox"/>	Have a minimum of two people available during assembly.	
<input type="checkbox"/>	Make sure all major components and loose parts are shipped with the attachment.	Assembly & Set-up
<input type="checkbox"/>	Double check to make sure all parts, fasteners, and pins are installed in the correct location. Refer to the Parts Manual if unsure. NOTE: All assembled hardware from the factory has been installed in the correct location. Remember location of a part or fastener if removed. Keep parts separated.	Operator’s Manual 380-092M Parts Manual 380-092P
<input type="checkbox"/>	Make sure working parts move freely, bolts are tight & cotter pins are spread.	Operator’s Manual
<input type="checkbox"/>	Make sure all grease fittings are in place and lubricated.	Page 18
<input type="checkbox"/>	Make sure all safety labels are correctly located and legible. Replace if damaged.	Page 6

Grapple Mount Options

Grapples With Universal Quick Attach Mount

Claw grapples with this mount fit the Universal Quick Attach Hitch. Follow all instructions in this Operator’s Manual except instructions specifically provided for the Kubota B Series Hitch.

Grapples With Kubota B Series Mount

Claw grapples with this mount fit the Kubota B Series hitch. Follow all instructions in this Operator’s Manual except instructions specifically provided for the Universal Quick Attach Hitch.

Grapples With No Mount

Claw grapples with the no mount option will allow the customer to install a mount that fits their power unit. Follow all instructions provided in this Operator’s Manual. Use hook-up and unhooking instructions in this manual and your equipment’s Operator’s Manual to know how best to hook-up and unhook the claw grapple.

Section 1: Assembly & Set-Up

Installation of Hydraulic Hoses

Refer to Figure 1-1:

NOTE: If your Kubota tractor loader does not have a Third Function Valve Kit, one that will fit your Kubota tractor can be purchased from your nearest Land Pride dealer.


If you are attaching this grapple to a non-Kubota tractor, some customer modifications to the standard hydraulic hoses may be required to complete the hose hook-up to your tractor loader or tractor.

Hydraulic hose (#3) is attached to the rod end (port #9) on hydraulic cylinders (#10) and will open the grapple claw while under pressure.

Hydraulic hose (#6) is attached to the base end (port #11) on hydraulic cylinders (#10) and will close the grapple claw while under pressure.

If the grapple was shipped with hydraulic hoses (#3 & #6) attached to the grapple, skip to step 4 below. Otherwise continue with step 1.

1. Attach 90° elbow (#4) to 45° elbow (#5). Rotate elbow to point straight back as shown and tighten.
2. Attach 90° elbow (#7) to tee (#8). Rotate elbow to point straight back as shown and tighten.
3. Attach hydraulic hoses (#3 & #6) to elbows (#4 & #7). Tighten hydraulic hoses to the elbow fittings.
4. Determine if the loader's third function valve is set-up with pioneer couplers or flat face couplers. Select the grapple couplers (pioneer couplers #1A & #1B) or (flat face couplers #2A & #2B) that matches the loader's third function outlet couplers.
5. Determine which loader's third function coupler the operator will want under pressure while opening the grapple claw. Identify that coupler (male or female).
 - Select the male or female coupler that will mate with the identified coupler on the loader's third function valve and attach that coupler to hose (#3) and tighten.
 - Attach the remaining coupler to hydraulic hose (#6) and tighten.

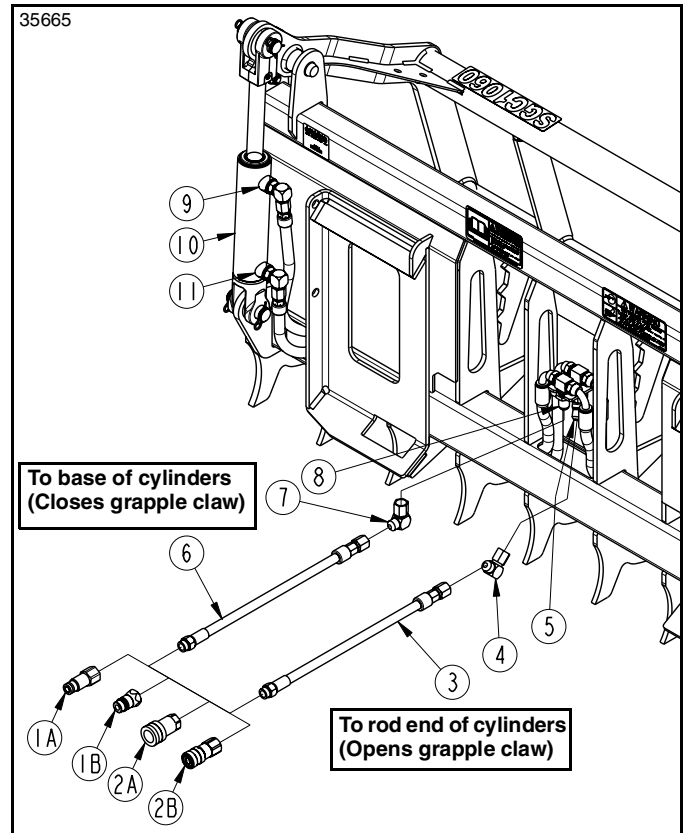


Customer Supplied Hydraulic Components
Figure 1-1

Tractor Shutdown Procedure

The following are basic tractor shutdown procedures. Follow these procedures and any additional shutdown procedures provided in your tractor Operator's Manual before leaving the operator's seat.

1. Reduce engine speed and shut-off all power to the attachment.
2. Park tractor and attachment on solid, level ground.
3. Lower attachment until it is flat on the ground or on non-concrete support blocks.
4. Put tractor in park or set park brake, turn off engine, and remove ignition key to prevent unauthorized starting.
5. Relieve all hydraulic pressure to auxiliary hydraulic lines.
6. Wait for all components to come to a complete stop before leaving the operator's seat.
7. Use steps, grab-handles and anti-slip surfaces when stepping on and off the tractor.

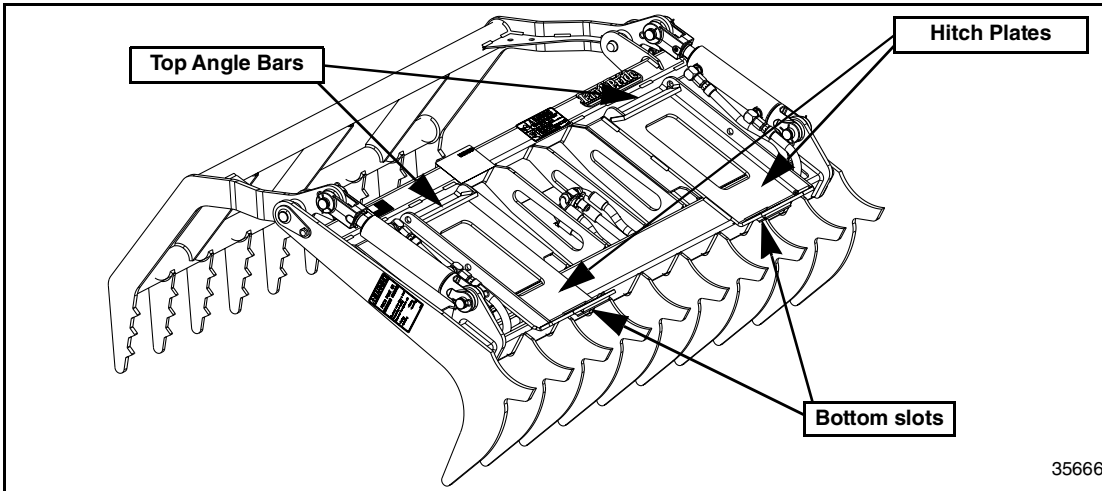

Hook-up to Grapple With Universal Hitch Plate
Figure 1-2

Hook-up to Universal Quick Hitch

! DANGER

To avoid serious injury or death:

A crushing hazard exists while hooking-up and unhooking the implement. Keep people and animals away while backing-up to the implement or pulling away from the implement. Do not operate hydraulic controls while a person or animal is directly behind the power machine or near the implement.

! WARNING

To avoid serious injury or death:

Check hitch fit-up frequently. An improper fit-up can cause the attachment to come loose from the loader hitch plate and fall.

This Claw Grapple is designed for tractors with front mounted loaders with universal quick attach hitches.

Refer to Figure 1-2:

1. Check for and remove any debris in the hitch areas before hooking-up the grapple.
2. Rotate loader tilt arms forward and lower loader arms until the top of the loader hitch plate is below the grapple's top angle bars.
3. Drive tractor slowly forward until the loader's hitch plate is positioned under the grapple's angle bars.
4. Slowly raise loader arms while at the same time rotating loader tilt arms back until the hitch plate is fully seated under the grapple's top angle bars.
5. Continue to raise the loader arms and rotate the loader tilt arms back until the loader's hitch plate has made full contact with the grapple's hitch plate.
6. Push lock handles on the loader's hitch plate fully down. Make sure lock pins go through the bottom slots in the grapple's hitch plate.
7. Skip to "Hydraulic Hose Hook-Up" on page 12.

Unhook From Universal Quick Hitch


Refer to Figure 1-2:

! WARNING

To avoid serious injury or death:

Store attachment with hydraulic cylinders fully retracted, upper claw fully open, and upper and lower teeth pointing down resting on the ground. The attachment can tip-over if stored in the upright position.

1. See "Long-Term Storage" on page 17 if parking grapple for long periods and end of season.
2. Park tractor on a flat level solid surface.
3. Fully open upper claw, rotate loader tilt arms forward, and lower loader lift arms until both upper and lower grapple teeth are resting on the ground as shown in Figure 1-2.
4. Shut tractor down according to "Tractor Shutdown Procedure" on page 9.
5. With grapple upper and lower teeth resting on the ground, operate all hydraulic control levers back and forth to release hydraulic system pressures.
6. Disconnect hydraulic hoses from tractor loader and store them on the grapple.
7. Pull lock handles up to remove lock pins from the bottom slots in the grapple hitch plate.
8. Return to the tractor and rotate loader tilt arms forward while slowly backing away from the grapple until top of loader quick hitch and grapple top angle bars have separated.
9. Continue to carefully back away from the grapple until the loader hitch plate clear of the grapple.
10. Rotate loader quick hitch to the vertical position and raise loader arms up to a suitable traveling height.

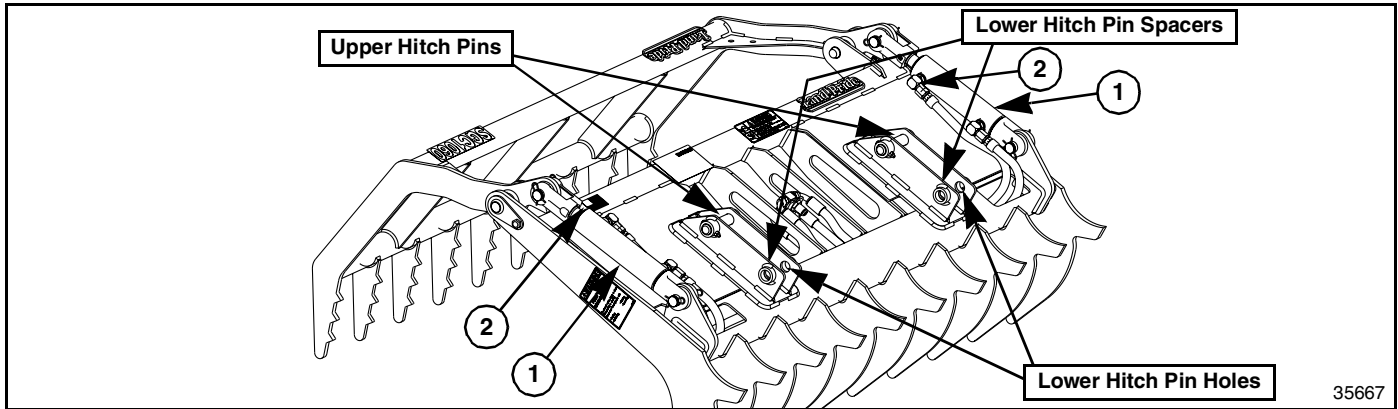

Hook-up to Grapple With Kubota B Series Hitch

Figure 1-3

Hook-up to Kubota B Series Hitch

! DANGER

To avoid serious injury or death:

A crushing hazard exists while hooking-up and unhooking the implement. Keep people and animals away while backing-up to the implement or pulling away from the implement. Do not operate hydraulic controls while a person or animal is directly behind the power machine or near the implement.

! WARNING

To avoid serious injury or death:

Check Kubota B tractor hook-up points frequently. Make sure attachment's top hitch pins are fully seated in the loader hitch hooks. Lower hitch pins must be fully inserted and secured with wire retaining pins. An improperly attached unit can fall.

This Claw Grapple is designed for tractors with Kubota B Series front mounted loaders.

Refer to Figure 1-3:

NOTE: Lower wire retaining pins and hitch pins are supplied with Kubota B Series Loader.

1. Check for and remove any debris in the hitch areas before hooking-up the grapple.
2. Remove wire retaining hitch pins from the loader.
3. Rotate top of loader hitch forward and lower loader arms until upper loader hitch hooks are in-alignment with the grapple's upper hitch pins.
4. Drive tractor slowly forward until upper grapple hitch pins are caught by the loader's upper hitch hooks.
5. Slowly raise loader arms while rotating top of loader hitch plate back until the loader upper hooks are fully seated in the grapple's hitch pins and lower saddle plates on the loader hitch are seated against the grapple's lower hitch pin spacers.
6. Raise grapple off the ground and insert wire retaining hitch pins. Secure hitch pins by catching the wire retainers are over the hitch pin ends.
7. Skip to "Hydraulic Hose Hook-Up" on page 12.

Unhook From Kubota B Series Hitch

Refer to Figure 1-3:

! WARNING

To avoid serious injury or death:

Store attachment with hydraulic cylinders fully retracted, upper claw fully open, and upper and lower teeth pointing down resting on the ground. The attachment can tip-over if stored in the upright position.

1. See "Long-Term Storage" on page 17 if parking grapple for long periods and end of season.
2. Park tractor on a flat, level, solid surface.
3. Fully open upper claw, rotate loader tilt arms forward, and lower loader lift arms until both upper and lower grapple teeth are resting on the ground as shown in Figure 1-3.
4. Shut tractor down according to "Tractor Shutdown Procedure" on page 9.
5. With grapple upper and lower teeth resting on the ground, operate all hydraulic control levers back and forth to release hydraulic system pressures.
6. Disconnect hydraulic hoses from tractor and store them on the grapple.
7. Remove wire retaining pins from the loader hitch pins and remove lower hitch pins from the lower grapple hitch pin spacers.
8. Slowly raise loader arms while rotating top of loader hitch plate forward until loader saddle plates are clear of the grapple's lower hitch pin spacers.
9. Slowly back tractor away from the grapple until top of Kubota's B Series hitch has separated from grapple's upper hitch pins.
10. Continue to carefully back away from the grapple until the loader hitch is clear of the grapple.
11. Rotate B Series hitch to the vertical position and raise loader arms up to a suitable traveling height.
12. Reinsert lower hitch pins and secure in place with wire retaining pins.

Section 1: Assembly & Set-Up

Hydraulic Hose Hook-Up

WARNING

To avoid serious injury or death:

Hydraulic fluid under high pressure will penetrate the skin or eyes causing a serious injury. Wear protective gloves and safety glasses or goggles when working with hydraulic systems. Use a piece of cardboard or wood rather than hands when searching for leaks. If an accident occurs, seek immediate emergency medical care or gangrene may result. **DO NOT DELAY.**

NOTE: If your Kubota tractor loader does not have a Third Function Valve Kit, one that will fit your Kubota tractor can be purchased from your nearest Land Pride dealer.

If attaching this grapple to a non-Kubota tractor, some modifications to the standard hydraulic hoses may be required by the customer to complete the hose hook-up to your tractor loader and/or tractor.

IMPORTANT: Hose routing is the responsibility of the owner/operator. Pinched and/or stretched hoses are not covered under the warranty.

IMPORTANT: Make sure coupler fittings on the hydraulic hoses and power machine are clean before connecting them together.

Refer to Figure 1-2 on page 10:

1. Route hydraulic hoses through the most convenient path to access your tractor couplings.
2. Clean quick disconnect couplers of dirt and then connect male and female couplers to the tractor outlets. Make sure quick disconnect couplers have fully engaged. If they have not, check the following:
 - a. Make sure couplers are same size and type.
 - b. Make sure all hydraulic pressures are released.
3. Extend/retract hydraulic cylinders with third function controls. Switch couplers on hydraulic hoses if cylinders operate the opposite direction intended.


Equipment Clearances

Refer to Figure 1-4:

It is important to check the clearance between tractor loader and grapple before putting grapple into service. Make sure hoses are long enough and won't become pinched or entangled in the equipment. Also, make sure the grapple does not come in contact with tractor loader.

IMPORTANT: Add cylinder stops (#2) to hydraulic cylinders (#1) if grapple or hydraulic hoses come close to making contact with loader. Purchase two sets of cylinder stops (#2) (Part No. 810-818C) from your nearest Land Pride Dealer.

1. Visually inspect hydraulic hoses for possible pinch points and shortness. Make hose adjustments before operating hydraulics to checking clearances.

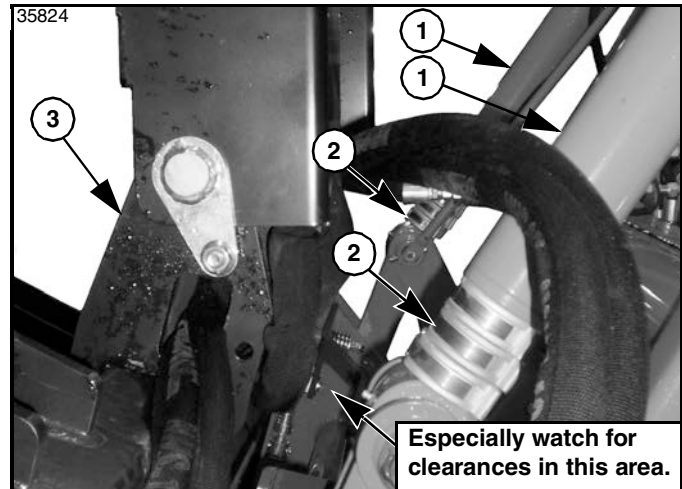

Cylinder Stops Added to Loader Hydraulic Cylinders
Figure 1-4

2. Start tractor and raise grapple approximately 12" (31 cm) off the ground.
3. If necessary, have someone stand nearby that can motion for the operator to stop if a problem develops while completing steps 4-7 below.
4. Fully extend grapple hydraulic cylinders to pivot upper jaw (#3) fully down.
5. Fully extend and retract hydraulic cylinders (#1) on end of loader arms while watching for interferences between loader and grapple. Stop movement if grapple or hoses come near the loader. When needed, add an equal amount of cylinder stops (#2) to both cylinders (#1) to keep grapple and hoses from hitting or becoming entangled with the loader.
6. Fully retract grapple cylinders to pivot jaw (#3) fully up and repeat step 5.
7. Raise grapple fully up and repeat steps 4-6.
8. Lower grapple to ground and close grapple jaw (#3).

Purging Hydraulic System

IMPORTANT: Purge hydraulic cylinders and/or hoses of air before putting the equipment into service. Not purging the system can cause uneven cylinder movement and positioning.

1. With grapple raised off the ground about 12" (31 cm), cycle grapple hydraulic cylinders several times from fully extended to fully retracted.

Refer to Figure 1-3 on page 11:

2. If cylinder operates unevenly after cycling it several times, then purge hydraulic system as follows:
 - a. Loosen hydraulic hose fittings (#2) at rod end of hydraulic cylinders (#1).
 - b. Slowly retract and extend hydraulic cylinders to purge any trapped air from the system.
 - c. Tighten fittings (#2) to hydraulic cylinders (#1) once all trapped air is removed.



Section 2: Operating Procedures

Operating Checklist

Hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training involved in the operation, transport, storage, and maintenance of the Claw Grapple. Therefore, it is absolutely essential that no one operates the unit unless they have read, fully understood, and are totally familiar with the Operator’s Manual. Make sure the operator has completed the Operating Checklist below.

Operating Checklist

✓	Check	Page
	Read and follow all safety rules carefully. Refer to “Important Safety Information” and Safety Alert Symbols throughout this manual.	All
	Make sure there are no hydraulic leaks. Refer to “Avoid High Pressure Fluids Hazard”.	3
	Read and follow hook-up & preparation. Refer to “Section 1: Assembly & Set-Up”.	8
	Read and follow all operating procedures. Refer to “Section 2: Operating Procedures”.	13
	Read and follow all maintenance instructions. Refer to “Section 3: Maintenance & Lubrication”.	17
	Check grapple initially and periodically for loose bolts and pins. Refer to “Torque Values Chart”.	22

General Inspection

Make the following inspections with grapple attached to a tractor that is parked on a level surface.

- Complete Operating Checklist provided above.
- Inspect tractor safety equipment to make sure it is in good working condition and that all safety alert decals are visible and legible. Replace all missing and illegible safety alert decals.
- Inspect hitch hook-up to grapple. Make sure front mounted loader hitch is secured to the grapple as follows:
 - Universal Quick Hitch:** Top of quick hitch is secured under grapple’s top angle bars, lock pins extend fully through bottom slots in grapple hitch, and handles are locked down.
 - Kubota B Series Hitch:** Upper J-hooks are secured under the grapple’s upper hitch pins, Kubota’s lower hitch pins are properly installed, and wire retaining pins are properly secured.
- Consult your tractor Operator’s Manual to determine if ballast is required. Add ballast if needed.
- Inspect condition of hydraulic hoses, fittings, and valves before starting the machine. Make sure hoses are not pinched, kinked, twisted, or frayed and that they will not contact moving parts.

- Operate hydraulic controls to verify control lever movements function properly and equipment movements are correct. Make any necessary changes to controls and hydraulic hook-ups before putting equipment into service.
- Operate grapple through its full range of movements to check for clearances. Refer to “**Equipment Clearances**” on page 12 for detailed instructions.
- Purge hydraulic system of trapped air by operating all hydraulic functions several times before putting unit into service. Refer to “**Purging Hydraulic System**” on page 12 in this manual and your tractor Operator’s Manual if any hydraulic function continues to operate erratic.

Operating Safety



To avoid serious injury or death:

- Keep attachment, loader arms, and/or load away from overhead electrical power lines. Place an orange warning sign under overhead lines indicating type of danger above.
- Make sure the machine is stopped on solid, level ground before raising load to dump. To maintain stability, raise load only to the height necessary to complete the dump.
- Never dump a load around gas lines, overhead power lines, utilities, or other hazards that can cause serious injury or death from electrocution, explosion, or fire.
- Always secure equipment with solid, non-concrete supports before working under it. Never go under equipment supported by concrete blocks or hydraulics. Concrete can break, hydraulic lines can burst, and/or hydraulic controls can be actuated even when power to hydraulics is off.
- Keep load positioned forward enough to prevent accidental spillage onto the operator and power machine.
- Keep load slightly tilted back to secure its weight against the vertical face of the attachment. Rotating front of attachment too high can cause the load to shift and fall onto the operator or others. Rotating front of attachment level or lower can cause the load to fall forward.
- Make sure all objects are contained and/or secured before lifting. Do not lift a load that cannot be contained in the attachment as the load can shift and fall.
- Use a “spotter” when it is hard to see in the direction you are traveling and when placing a load that obstructs your vision. A person or animal could be nearby in a blind spot.
- A crushing hazard always exists around attachments. The jaws can crush and objects in the attachment can shift and fall.
- Do not drive up to anyone or an animal in front of a fixed object such as a wall or bench. Never assume that the power machine will stop in time.
- Do not lift a load that cannot be contained in the attachment, exceeds the attachment’s load guard height, or has objects smaller than the openings in the load guard.



Section 2: Operating Procedures

- *Keep bystanders, pets, and livestock away from your work area. Never allow anyone to go near or under the attachment or its load. The attachment and/or load can fall.*
- *Do not let children play on or around the attachment including when stored. Children and/or attachment can fall.*

WARNING

To avoid serious injury or death:

- *Never carry riders on the attachment or power machine. Riders can obstruct the operator's view, interfere with controls, be pinched by moving components, become entangled in rotating components, struck by objects, thrown about, fall off and be run over, etc.*
- *Operate only power machines equipped with a certified Roll-Over Protective Structure (ROPS) and seat belt. Keep folding ROPS in the "locked up" position when appropriate. If ROPS is in the locked up position, fasten seat belt snugly and securely to help protect against serious injury or death from falling and machine overturn.*
- *Allow only persons to operate this implement who have fully read and comprehended this manual, and who have been properly trained in the safe operation of this implement. Serious injury or death can result from the inability to read, understand, and follow instructions provided in this manual.*
- *Hydraulic fluid under high pressure will penetrate the skin or eyes causing a serious injury. Wear protective gloves and safety glasses or goggles when working with hydraulic systems. Use a piece of cardboard or wood rather than hands when searching for leaks. If an accident occurs, seek immediate emergency medical care or gangrene may result. DO NOT DELAY.*
- *Do not alter attachment or replace parts on the attachment with other brands. Other brands may not fit properly or meet OEM specifications. They can weaken the integrity and impair the safety, function, performance, and life of the attachment. Replace parts only with genuine OEM parts.*
- *Follow recommendations in the power machine Operator's Manual when parking or dismounting the power machine.*
- *Always lower grapple to the ground and fully close upper jaw before dismounting to service the grapple or to park with grapple attached. Working around a grapple with the upper jaw raised or getting on and off the power machine with the loader arms not fully down can cause a crushing hazard due to accidental movement of the control levers or loss of hydraulic pressure.*
- *Store attachment with hydraulic cylinders fully retracted, upper claw fully open, and upper and lower teeth pointing down resting on the ground. The attachment can tip-over if stored in the upright position.*
- *Lightweight power machines may need weight added to the rear to maintain steering control and prevent forward and/or side tipping. Consult your power machine Operator's Manual to determine proper weight requirements and maximum limitations.*

- *Wear appropriate personal protective gear. Include eye protection when appropriate and when operating a power machine without an enclosure or protective shield. Dust and debris can get into the eyes.*
- *Do not force solid objects in between teeth while closing upper jaw against lower jaw.*
- *Keep load centered, even when stopped. This will optimize load stability and protect against load shifting.*
- *Do not abuse equipment. Incorrect use of the attachment can damage equipment structurally and cause serious injury or death.*
- *Consult your power machine Operator's Manual for operating capacity, lifting capacity, and operating specifications. Exceeding rated capacities and specifications can result in loss of control, roll-over or other serious hazard.*
- *Check hitch fit-up frequently. An improper fit-up can cause the attachment to come loose from the loader hitch plate and fall.*
- *Do not chain or strap loads to the loader arms, hitch, or attachment. Hitting solid objects with a load fastened to the attachment or machine can cause frame damage and/or tipping resulting in the loss of operator control.*
- *Do not use this attachment as a lifting device for people or as a work platform. It is not properly designed or guarded for this use.*
- *Do not use this attachment to lift the front or back of the power machine off the ground. Doing so can damage the attachment, power machine, and/or cause serious injury or death.*
- *Do not use this attachment to pull and/or pry objects out of the ground or for digging into the ground. It is not properly designed or guarded for this use.*
- *Do not use this attachment for pulling objects out of the ground, for prying other objects, or for pushing and towing other equipment.*
- *Never work near utilities such as gas lines, electrical lines, or other hazards that can cause serious injury or death from electrocution, explosion, or fire.*
- *Never make contact with underground utilities such as electrical power lines, gas lines, phone lines, etc. They can cause serious injury or death from electrocution, explosion, or fire. Always call 811 (USA) before digging so that they can mark the location of underground services in the area. For contact information, see Dig Safe in the "Important Safety Information" starting on page 1.*



Section 2: Operating Procedures

Transport Safety

WARNING

To avoid serious injury or death:

- Follow all safety precautions when transporting a load. Not using safe transporting methods can damage the equipment and cause serious injury or death.
- Always transport loads as close to the ground as possible without hitting objects. A load carried high could shift causing the load to fall, tipping of the machine, and/or loss of control.
- Always transport over ramps and inclines with the heavy end of the power machine on the “uphill” side. This may require one to drive up or back down inclines.
- Always travel straight up and straight down inclines. Never make turns on the incline.
- Transporting loads across inclines, over ramps, on bumpy, soft, or slippery surfaces reduces machine stability and lift capacity. Transporting and lifting loads under these conditions is extremely dangerous. Follow all transport instructions in your power machine Operator’s Manual.
- Do not transport on public roadways with a load in the attachment. The load can create a traffic hazard if it is too wide, falls from the attachment, or obstructs the operator’s vision and/or vision of operators in approaching vehicles.
- Only travel on public roadways if the attachment is empty. Travel in such a way that faster moving vehicles may pass safely. Use accessory lights, clean reflectors, and a slow moving vehicle sign that is visible from the back to warn operators in other vehicles of your presence. Always comply with all federal, state, and local laws.

Claw Grapple Operation

Picking-Up A Load

WARNING

To avoid serious injury or death:

- Use a power machine of adequate size for the load being carried. An undersized machine can roll over when raising the loader arms due to high center of gravity.
- Keep bystanders at a safe distance when entering and picking up a load. Objects can shift or be thrown suddenly as the attachment makes contact with load causing serious injury or death.
- Enter pick-up zone carefully making sure no object will come through or pass the attachment into the operator’s space.

IMPORTANT: Do not ram attachment into a pile or hook a chain to the attachment to secure a load. Doing so can damage the attachment.

IMPORTANT: Close upper jaw with care when lifting fragile or hollow objects such as a crate. This will help protect the object from being crushed.

1. Be sure to read and understand all safety alerts under “**Operating Safety**” on page 13.
2. Make sure load does not exceed rated lift capacity of the tractor being used to lift the load.
3. Check for overhead obstructions.
4. Center grapple on material to be picked up.
5. Make a complete stop in front of material and position grapple at the proper height to enter the pile.
6. Fully open grapple jaw and slowly drive into the pile. Do not ram grapple into pile.
7. Close grapple jaw to secure load.
8. Lift load a few inches and tilt it back slightly.
9. Make sure you have good control of the load. If load is not secure, release and recapture load in a more secure location.
10. Back load out of the pile slowly making sure load clears all other obstacles.
11. Not always will load be secured properly in the grapple when pulled free from a pile. Before traveling with a loose load, lower load to ground, release load, and re-clamp load to make it more secure.
12. Position load at a safe, low traveling height before transferring to unloading site.

Traveling With A Load

WARNING

To avoid serious injury or death:

Do not transport on public roadways with a load in the attachment. The load can create a traffic hazard if it is too wide, falls from the attachment, or obstructs the operator’s vision and/or vision of operators in approaching vehicles.

1. Be sure to read and understand all safety alerts under “**Transport Safety**” on page 15.
2. Pedestrians always have the right-of-way.
3. Keep load tilted back slightly.
4. When possible, travel with grapple and load kept low to the ground.
5. Continually scan all sides for pedestrians, other traffic, and obstacles.
6. If load is large and blocks your view, travel in reverse.
7. Always drive at a safe speed and slow down when going around corners. Avoid sudden braking.
8. Leave enough clearance when turning so that the grapple and load does not contact obstacles such as vehicles, buildings, trees, or fences.
9. When traveling over a ramp or incline, keep load on the “uphill” side of tractor.
10. When possible, travel straight up and down grades, ramps, and inclines. Avoid making turns on grades, ramps, and inclines.
11. Raise or lower load only when stopped, never while traveling.



Section 2: Operating Procedures

12. Slow down when traveling over rough or hilly terrain.
13. Do not transport loads on public roadways.
14. Transport on public roadways without a load and transport in such a way that faster moving vehicles may pass you safely.
15. Plan your route to avoid heavy traffic.

Releasing A Load

1. Be sure to read and understand all safety alerts under “**Operating Safety**” on page 13.
2. Stop in front of desired location.
3. Slowly raise load to required height.
4. Move forward slowly checking to make sure grapple and load clears all obstacles.
5. Stop forward movement when load is positioned over its release location.
6. Releasing load requires a combination of tilting front of grapple down, raising upper jaw, and raising loader arms. The order in which the load is released will vary depending on type of material being released. The most important objective is to have the load under control throughout the release.
7. Once load has settled onto the pile, slowly back up making sure grapple clears all objects and there are not any pedestrians or other traffic behind or on either side.
8. Leave enough clearance when turning and/or lowering the grapple so that it does not make contact with obstacles such as vehicles, buildings, trees, or fences.
9. Lower grapple to transporting height (low to the ground) before moving again.

Ripping Out Bushes

1. Be sure to read and understand all safety alerts under “**Operating Safety**” on page 13.
2. Open upper claw halfway.
3. Rotate front of grapple down while lowering unit until upper teeth extend into the ground on the far side of the bush and lower teeth are on the near side.
4. Close grapple claws around the roots of the bush.
5. Raise grapple up to rip bush from ground.

Breaking Sod & Pulling Roots

IMPORTANT: Do not operate attachment with lower teeth extending very deep into the ground. Doing so can damage equipment.

1. Be sure to read and understand all safety alerts under “**Operating Safety**” on page 13.
2. Open upper claw halfway and rotate grapple upright while lowering unit until rear tips of lower claw extend into the ground. Do not go very deep into the ground.
3. Back-up to break up sod and pull roots from the sod.

Back Raking

IMPORTANT: Check full range of motion before rotating attachment down to back rake. See “**Equipment Clearances**” on page 12.

1. Be sure to read and understand all safety alerts under “**Operating Safety**” on page 13.
2. Open upper claw halfway and rotate grapple upright while lowering unit until rear tips of lower claw rest on the ground.
3. Back-up to rake loose sticks and debris into a pile.
4. For instructions on how to pick-up the raked pile, see “**Picking-Up A Load**” on page 15.

General Operating Instructions

By now you should have familiarized yourself with the Operator’s Manual for your Claw Grapple. If you haven’t, please do so now. Proceed by getting onto the seat of your tractor and starting it up. It isn’t going to take you long to learn how to use your new Land Pride Claw Grapple, but we do recommend that you take a little time to practice securely attaching and detaching your grapple to and from your mounting plate. It is also important to practice lifting, lowering, maneuvering, and placing a load until you gain the confidence and skill needed to have a good feel in what you are doing. We cannot overstate the importance of following the safety information and operating procedures that are spelled out in this Operator’s Manual.

As you quickly become more skilled and adept in using your Claw Grapple, you will soon learn that it is always more important to focus on the “don’ts” than it is to focus on the “dos.” For example, don’t exceed the lift capacity of your grapple or tractor. Don’t lift your load too high creating an unstable load and unsafe situation. Don’t tilt your load too far backwards, setting up a situation that could cause your load to roll or spill backwards onto you, the tractor, and the operator’s platform. Don’t drive too fast for your ground and load conditions. Don’t work on or around slippery or sloped areas that could cause you to lose control of the tractor. Don’t allow pedestrians, pets, or livestock to approach the danger zone of your working area. Always close grapple upper claw and lower grapple until resting on the ground before leaving your tractor.

If you just follow these few safety reminders, you will find that you will quickly become very adept, handy, and skillful at using your Land Pride Claw Grapple.

See “**Specifications & Capacities**” on page 19 and “**Features & Benefits**” on page 20 of your Operator’s Manual for additional information.



Section 3: Maintenance & Lubrication

Maintenance

Proper servicing and adjustments are key to the long life of any attachment. With careful inspection and routine maintenance, you can avoid costly downtime and repair.

Check all bolts and pins after using the grapple for several hours and on a regular basis thereafter to ensure they are tight and secured.

Check hitch fit-up, hydraulic hoses, and fittings on a regular basis to ensure trash or other objects have not loosened the hitch connection or damaged hydraulic hoses and fittings.

Replace worn, damaged, or missing grapple parts only with genuine Land Pride parts.

Replace illegible or missing safety labels by obtaining new labels from your Land Pride dealer.

 **DANGER**

To avoid serious injury or death:

Always secure equipment with solid, non-concrete supports before working under it. Never go under equipment supported by concrete blocks or hydraulics. Concrete can break, hydraulic lines can burst, and/or hydraulic controls can be actuated even when power to hydraulics is off.

 **WARNING**

To avoid serious injury or death:

- *Make sure controls are all in neutral position or park before starting the power machine.*
- *Check hitch fit-up frequently. An improper fit-up can cause the attachment to come loose from the loader hitch plate and fall.*
- *Check hydraulic hoses and fittings frequently. Brush and other debris can damage hoses and fittings causing the load to release and fall.*
- *Perform scheduled maintenance. Check for loose hardware, missing parts, broken parts, structural cracks, and excessive wear. Make repairs before putting the implement back into service.*
- *Do not alter attachment or replace parts on the attachment with other brands. Other brands may not fit properly or meet OEM specifications. They can weaken the integrity and impair the safety, function, performance, and life of the attachment. Replace parts only with genuine OEM parts.*

Hydraulic System

 **WARNING**

To avoid serious injury or death:

Hydraulic fluid under high pressure will penetrate the skin or eyes causing a serious injury. Wear protective gloves and safety glasses or goggles when working with hydraulic systems. Use a piece of cardboard or wood rather than hands when searching for leaks. If an accident occurs, seek immediate emergency medical care or gangrene may result. DO NOT DELAY.

One of the most important things you can do to prevent hydraulic system problems is to ensure your tractor's hydraulic reservoir remains free of dirt and other contaminations.

Use a clean cloth to wipe hose ends clean before attaching them to your tractor. Replace tractor hydraulic filter element at the prescribed intervals. These simple maintenances will go a long way to prevent occurrence of control valve and hydraulic cylinder problems.

Check for signs of damaged or worn hydraulic hoses, fittings and cylinders before each use of the cutter. Replace damaged components as needed. Order only genuine Land Pride parts from your local Land Pride dealer.

Long-Term Storage

 **WARNING**

To avoid serious injury or death:

Store attachment with hydraulic cylinders fully retracted, upper claw fully open, and upper and lower teeth pointing down resting on the ground. The attachment can tip-over if stored in the upright position.

Clean, inspect, service, and make necessary repairs to the implement when storing it for long periods and at the end of the season. This will help to ensure the unit is ready for field use the next time you hook-up to it.





1. Clean off any dirt and grease that may have accumulated on the grapple. Scrape off compacted dirt and then wash its surface thoroughly with a garden hose.
2. Inspect grapple for loose, damaged, or worn parts and adjust or replace when needed.
3. Repaint parts where paint is worn or scratched to prevent rust. Ask your Land Pride dealer for aerosol touch-up paint. They are also available in touch-up bottles with brush, quarts, and gallon sizes by adding TU, QT, or GL to the end of the aerosol part number.


Touch-Up Paint	
Part No.	Part Description
821-070C	Gloss black enamel spray can
821-070CTU	Gloss black enamel bottle with brush
821-070CQT	Gloss black enamel quart
821-070CGL	Gloss black enamel gallon



4. Replace all damaged or missing guards & decals.
5. Lubricate as noted in “**Lubrication Points**” starting on page 18.
6. Store grapple on a level surface in a clean, dry place. Inside storage will reduce maintenance and make for a longer grapple life.
7. Do not allow children to play on or around the stored grapple.

Section 3: Maintenance & Lubrication

Lubrication Points

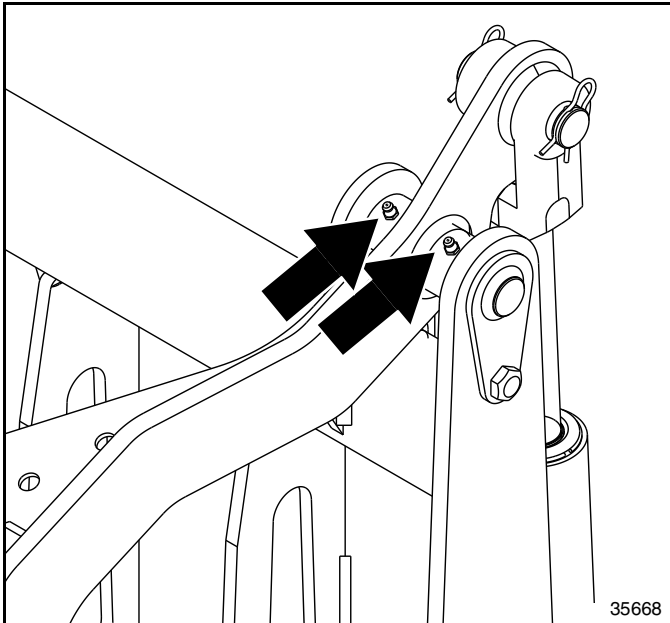Lubrication Legend	 Multi-purpose spray lube	 Multi-purpose grease lube	 Multi-purpose oil lube	 50 Hrs	Intervals in hours at which lubrication is required



	 10 Hrs
---	---

Upper Grapple Pivot Points

4- Zerks (2 per side)

Type of Lubrication: Multi-purpose Grease

Quantity = As required (make sure grease is visible)



SGC10 Series


Specifications & Capacities			
Model No.'s	SGC1060	SGC1072	
Weight	Universal quick hitch	389 lbs (176 kg)	447 lbs (203 kg)
	Kubota B Series hitch	378 lbs 172 kg)	436 lbs (198 kg)
Width	62" (158 cm)	75" (191 cm)	
Closed height	34 1/8" (87 cm)	34 1/8" (87 cm)	
Jaw opening	39 1/2" (100 cm)	39 1/2" (100 cm)	
Number of teeth	10 Bottom & 9 Top	12 Bottom & 11 Top	
Teeth spacing	6 3/8" (16.2 cm) Bottom & 6 1/4" (15.9 cm) top		
Tooth thickness for upper and lower jaws	All outside teeth are 1/2" (13 mm) thick All teeth between outside teeth are 3/8" (10 mm) thick		
Working length of teeth	11 1/2" (29 cm)	11 1/2" (29 cm)	
Hydraulic cylinder	2" x 6" x 1 1/8" Rod		
Maximum pressure rating	3500 psi (24.1 mPa)		

Australia Rated Operating Loads (ROL)

Grapple Model No.	Units	Rated Operating Loads (ROL)	Counter Weight
SGC1060	lb (kg)	739 (335)	Consult Your Power Machine's Manual
SGC1072	lb (kg)	739 (335)	

Note: Rated Operating Loads published in this manual are for approved Australian Kubota loaders and tractors only.

35669

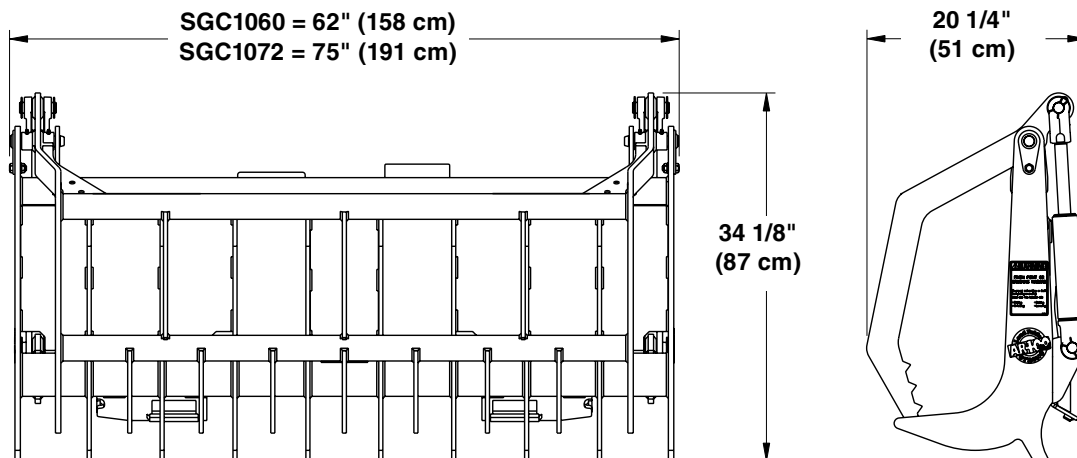



SGC10 Series

Features	Benefits
Attaches to power equipment easily	Uses universal quick hitch design for quick and easy attachment.
Universal quick hitch option or old style Kubota B Series hitch option	The quick attach plate mounted grapple can be attached to a wide variety of machines.
No mount option	This option has no mount on the back of the grapple and allows the customer to install a mount of their preference.
Designed to protect hydraulic hoses	Hydraulic hoses routed to prevent pinching.
Greasable hardened bushings at upper grapple pivot locations	Bushings can be replaced if needed.
1" Pivot pins	Large diameter pins for extra strength.
Dual hydraulic cylinders	Allows upper claw to grip the material better.
AR400 teeth material	More than double the strength of mild steel.
Hardened bushing at cylinder mount points	Bushings can be replaced if needed.
High volume cage design	Can handle large volume of material.
Rear facing lower teeth	Can be used for pulling roots or back dragging.



Troubleshooting Chart


Problem	Cause	Solution
Cannot lift load	Insufficient power to lift load.	Reduce load on grapple or switch to a tractor that is rated for more lift capacity.
Hydraulic hoses are stretched and/or damaged	Hydraulic hoses are catching on tree limbs, debris, or other solid objects.	Replace hydraulic hoses. Stay away from objects that can catch on hydraulic hoses. Stop immediately if hoses are catching on an object and remove object. If helpful, readjust hose routing.
Hydraulic fittings are damaged	Hydraulic hoses and/or fittings are catching on tree limbs, debris, or other solid objects causing fittings to become damaged.	Replace hydraulic fittings. Stay away from objects that can catch on hydraulic hoses. Stop immediately if hoses are catching on an object and remove object. If helpful, readjust hose routing.
Claws don't sufficiently clamp tight on a load	A load taken from a pile can be too bulky to properly clamp while in the pile.	Re-clamp load once load is free from pile.
Upper claw does not operate	Hydraulic hoses are not coupled to tractor.	Reattach couplings to tractor.
	Hydraulic hoses and/or fittings are damaged.	See " Hydraulic hoses are stretched and/or damaged " and " Hydraulic fittings are damaged " above.
Load is shifting	Hitch is not properly attached to front mounted loader.	Always make certain hitch is properly attached before lifting a load. Reattach hitch to front mounted loader if loose.
	Load is being carried too high.	Recommended carrying height is as close to ground as possible without hitting objects.
	Traveling and/or turning too fast.	Reduce speed to a safe non-bouncing speed.
	Traveling sideways to an incline.	Travel straight up and down inclines.
	Claws not clamped tight against the load.	Re-clamp load once load is free from pile.
	Load is not centered in grapple.	Center load on grapple.
	Traveling with bottom teeth tilted down at the front.	Keep load slightly tilted back to secure its weight against the bottom grapple teeth.
	Teeth are bent.	Straighten bent teeth.
Teeth are bending or breaking	Traveling forward while going down an incline with a slope in excess of 10 percent (5.7 degrees).	Back down steep inclines.
	The load's center of gravity is not centered in the grapple.	Reposition load so that the load's center of gravity is centered in the grapple.
	Load is too heavy for the grapple.	Lift lighter loads.
	Ramming grapple into the ground or load.	Never ram with grapple.
	Striking solid objects with the grapple.	Watch for objects while moving and allow clearance when making turns. Inspect area thoroughly before working in it and place markers, such as flags, to indicate potential hazards.
	Prying objects out of the ground.	Never use grapple to pry objects.
	Wedging objects between teeth with upper claw.	Do not wedge objects between teeth with upper claw.



Section 7: Torque Values Chart

Torque Values Chart For Common Bolt Size													
Bolt Size (inches)	Bolt Head Identification						Bolt Size (Metric)	Bolt Head Identification					
	Grade 2		Grade 5		Grade 8			Class 5.8		Class 8.8		Class 10.9	
in-tpi ¹	N · m ²	ft-lb ³	N · m	ft-lb	N · m	ft-lb	mm x pitch ⁴	N · m	ft-lb	N · m	ft-lb	N · m	ft-lb
1/4" - 20	7.4	5.6	11	8	16	12	M 5 X 0.8	4	3	6	5	9	7
1/4" - 28	8.5	6	13	10	18	14	M 6 X 1	7	5	11	8	15	11
5/16" - 18	15	11	24	17	33	25	M 8 X 1.25	17	12	26	19	36	27
5/16" - 24	17	13	26	19	37	27	M 8 X 1	18	13	28	21	39	29
3/8" - 16	27	20	42	31	59	44	M10 X 1.5	33	24	52	39	72	53
3/8" - 24	31	22	47	35	67	49	M10 X 0.75	39	29	61	45	85	62
7/16" - 14	43	32	67	49	95	70	M12 X 1.75	58	42	91	67	125	93
7/16" - 20	49	36	75	55	105	78	M12 X 1.5	60	44	95	70	130	97
1/2" - 13	66	49	105	76	145	105	M12 X 1	90	66	105	77	145	105
1/2" - 20	75	55	115	85	165	120	M14 X 2	92	68	145	105	200	150
9/16" - 12	95	70	150	110	210	155	M14 X 1.5	99	73	155	115	215	160
9/16" - 18	105	79	165	120	235	170	M16 X 2	145	105	225	165	315	230
5/8" - 11	130	97	205	150	285	210	M16 X 1.5	155	115	240	180	335	245
5/8" - 18	150	110	230	170	325	240	M18 X 2.5	195	145	310	230	405	300
3/4" - 10	235	170	360	265	510	375	M18 X 1.5	220	165	350	260	485	355
3/4" - 16	260	190	405	295	570	420	M20 X 2.5	280	205	440	325	610	450
7/8" - 9	225	165	585	430	820	605	M20 X 1.5	310	230	650	480	900	665
7/8" - 14	250	185	640	475	905	670	M24 X 3	480	355	760	560	1050	780
1" - 8	340	250	875	645	1230	910	M24 X 2	525	390	830	610	1150	845
1" - 12	370	275	955	705	1350	995	M30 X 3.5	960	705	1510	1120	2100	1550
1-1/8" - 7	480	355	1080	795	1750	1290	M30 X 2	1060	785	1680	1240	2320	1710
1-1/8" - 12	540	395	1210	890	1960	1440	M36 X 3.5	1730	1270	2650	1950	3660	2700
1-1/4" - 7	680	500	1520	1120	2460	1820	M36 X 2	1880	1380	2960	2190	4100	3220
1-1/4" - 12	750	555	1680	1240	2730	2010	¹ in-tpi = nominal thread diameter in inches-threads per inch ² N · m = newton-meters ³ ft-lb= foot pounds ⁴ mm x pitch = nominal thread diameter in millimeters x thread pitch						
1-3/8" - 6	890	655	1990	1470	3230	2380							
1-3/8" - 12	1010	745	2270	1670	3680	2710							
1-1/2" - 6	1180	870	2640	1950	4290	3160							
1-1/2" - 12	1330	980	2970	2190	4820	3560							

Torque tolerance + 0%, -15% of torque values. Unless otherwise specified use torque values listed above.
 All locknuts or lubricated fasteners: Use 75% of torque value. (i.e. 1/2"-13 GR5 = 76 ft-lb; 75% of 76 or .75 x 76 = 57 ft-lb)

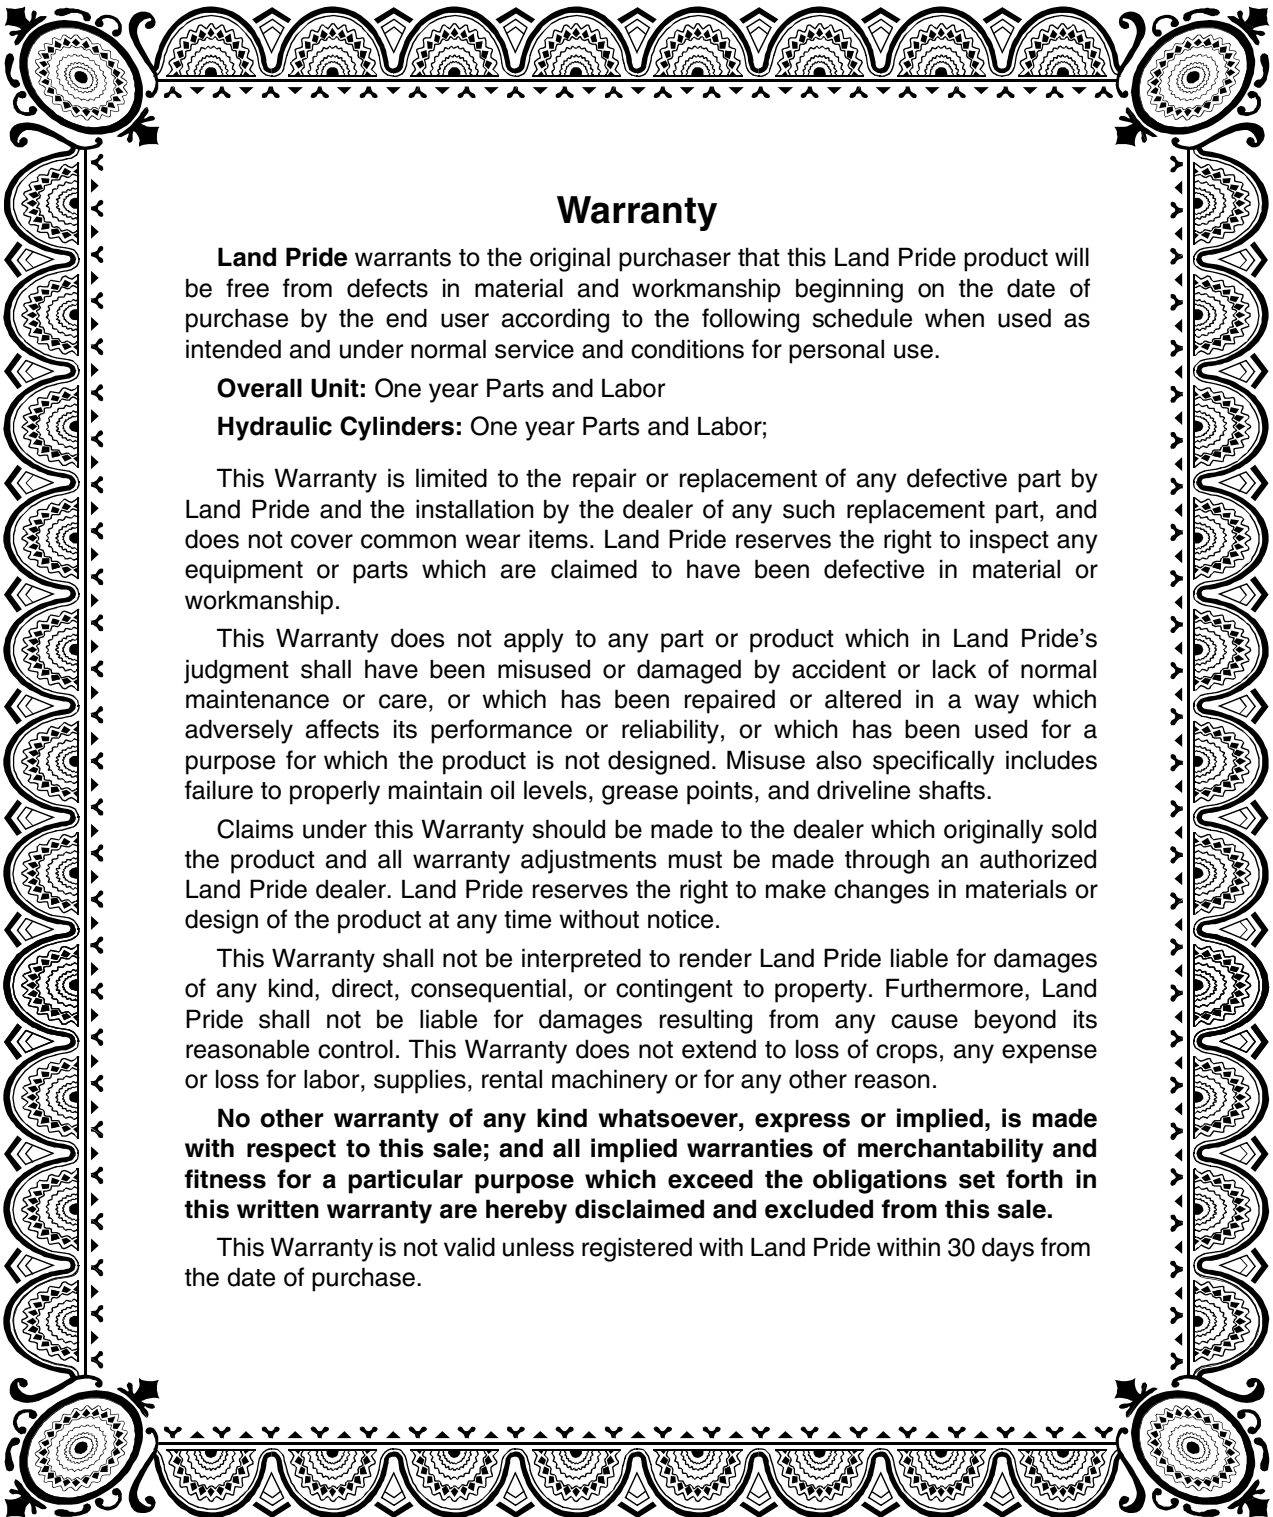

Warranty

Land Pride warrants to the original purchaser that this Land Pride product will be free from defects in material and workmanship beginning on the date of purchase by the end user according to the following schedule when used as intended and under normal service and conditions for personal use.

Overall Unit: One year Parts and Labor

Hydraulic Cylinders: One year Parts and Labor;

This Warranty is limited to the repair or replacement of any defective part by Land Pride and the installation by the dealer of any such replacement part, and does not cover common wear items. Land Pride reserves the right to inspect any equipment or parts which are claimed to have been defective in material or workmanship.

This Warranty does not apply to any part or product which in Land Pride's judgment shall have been misused or damaged by accident or lack of normal maintenance or care, or which has been repaired or altered in a way which adversely affects its performance or reliability, or which has been used for a purpose for which the product is not designed. Misuse also specifically includes failure to properly maintain oil levels, grease points, and driveline shafts.

Claims under this Warranty should be made to the dealer which originally sold the product and all warranty adjustments must be made through an authorized Land Pride dealer. Land Pride reserves the right to make changes in materials or design of the product at any time without notice.

This Warranty shall not be interpreted to render Land Pride liable for damages of any kind, direct, consequential, or contingent to property. Furthermore, Land Pride shall not be liable for damages resulting from any cause beyond its reasonable control. This Warranty does not extend to loss of crops, any expense or loss for labor, supplies, rental machinery or for any other reason.

No other warranty of any kind whatsoever, express or implied, is made with respect to this sale; and all implied warranties of merchantability and fitness for a particular purpose which exceed the obligations set forth in this written warranty are hereby disclaimed and excluded from this sale.

This Warranty is not valid unless registered with Land Pride within 30 days from the date of purchase.

IMPORTANT: The Online Warranty Registration should be completed by the dealer at the time of purchase. This information is necessary to provide you with quality customer service.

Model Number _____

Serial Number _____



Corporate Office: P.O. Box 5060
Salina, Kansas 67402-5060 USA
www.landpride.com
